



Fürdőszobai mosdószekrény leírás

Bathroom cabinet instruction

Termék leírás

A fürdőszobaszekrények tömörfa rétegelt lemezből készülnek. Fő jellemzői közé tartozik, hogy környezetbarát, vízálló és robusztus. Stílusa a minimalizmus jelenlegi koncepcióját követi, továbbá egyszerű és nagyvonalú. Különböző dekorációs stílusokhoz alkalmazható. Alkalmas különböző fürdőszobai stílusokhoz, társasházakhoz, lakásokhoz, szállodákhoz stb.

Termékjellemzők

Bútor anyaga: tömörfa rétegelt lemez

Hardver: 304 rozsdamentes acél zsanérok, tartós és zajmentes

Festékmentes, vízálló, környezetbarát

Mosdó: stabil, tartós, továbbá könnyen tisztítható

Telepítési lépések

1. Jelölje ki a szekrény megfelelő felakasztási pozícióját a falon.
2. Mérőszalaggal mérje ki a szekrény mögötti lyukak távolságát. Jelölje meg a helyet a falon, és elektromos fúróval készítsen lyukat a megjelölt helyeken. Helyezze be a tágulási csavart.
3. Helyezze a mosdót a beszerelt szekrényre és szerelje fel a hardvereket, például a csaptelepet.
4. Húzza körbe szilikonnal a mosdót.



Megjegyzés

1. A telepítés során ellenőrizze, hogy a furatoknál lévő csavarok meg vannak-e húzva. Megakadályozza a szekrények sérülését a későbbiekben.

Product features

Bathroom cabinets are made of solid wood plywood .The main features are environmental protection. waterproof, strong and durable.

Its style follows the current minimalist philosophy. Simple and generous. Suitable for a variety of decoration styles. It is suitable for various bathroom scenarios such as residences, apartments. hotels, etc.

Product parameters

Vanity material: Solid wood plywood


Hardware: 304 stainless steel hinge, does not rust, durable and quiet

Paint free, eco-friendly material, waterproof

Sink: solid durable, easy to clean

Installation steps

- 1 Mark the appropriate hanging position of the cabinet on the wall.
2. Use a tape measure to measure the hole spacing behind the cabinet. Mark the location on the wall and use an electric drill to make a hole at the marked location. Insert the expansion screw
3. Place the countertop on the installed cabinet. And install hardware such as faucet downspouts.

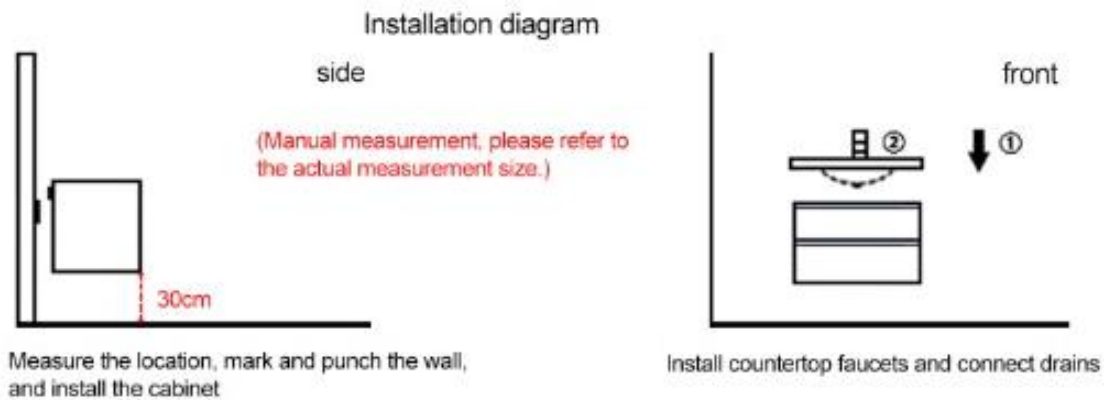

Notes

1. During the installation process check whether the screws at the holes are tightened that prevent cabinets from falling.
2. After the overall installation is completed. check whether there is water leakage in the launchmg water.