



Exkluzív fürdőszobai mosdószekrény leírás

Exclusive bathroom cabinet instruction

Termék leírás

A fürdőszobaszekrények tömörfa rétegelt lemezből készülnek. Fő jellemzői közé tartozik, hogy környezetbarát, vízálló és robusztus. Stílusa a minimalizmus jelenlegi koncepcióját követi, továbbá egyszerű és nagyvonalú. Különböző dekorációs stílusokhoz alkalmazható. Alkalmas különböző fürdőszobai stílusokhoz, társasházakhoz, lakásokhoz, szállodákhoz stb.

Termékjellemzők

Bútor anyaga: tömörfa rétegelt lemez

Hardver: 304 rozsdamentes acél zsanérok, tartós és zajmentes


Festékmentes, vízálló, környezetbarát

Mosdópult: stabil, tartós, továbbá könnyen tisztítható

Tükör: 5 mm rézmentes ezüst tükör, penész és rozsdamentes, nem torzít

Telepítési lépések

1. Jelölje ki a szekrény és a mosdópult megfelelő felakasztási pozícióját a falon.
2. Mérőszalaggal mérje ki a szekrény mögötti lyukak távolságát. Jelölje meg a helyet a falon, és elektromos fúróval készítsen lyukat a megjelölt helyeken. Helyezze be a táglási csavart.
3. Helyezze a szekrényt és a mosdópultot fel és szerelje be a hardvereket, például a csaptelepet.
4. Húzza körbe szilikonnal a mosdópultot.
5. A fürdőszobatükör beszerelési módja megegyezik a szekrényével: Mérje meg a tükörszekrény mögötti furattávolságot. Elektromos fúróval készítsen lyukakat a megjelölt helyeken a falon. Helyezze be a táglási csavart a lyukba és akassza fel a tükröt.

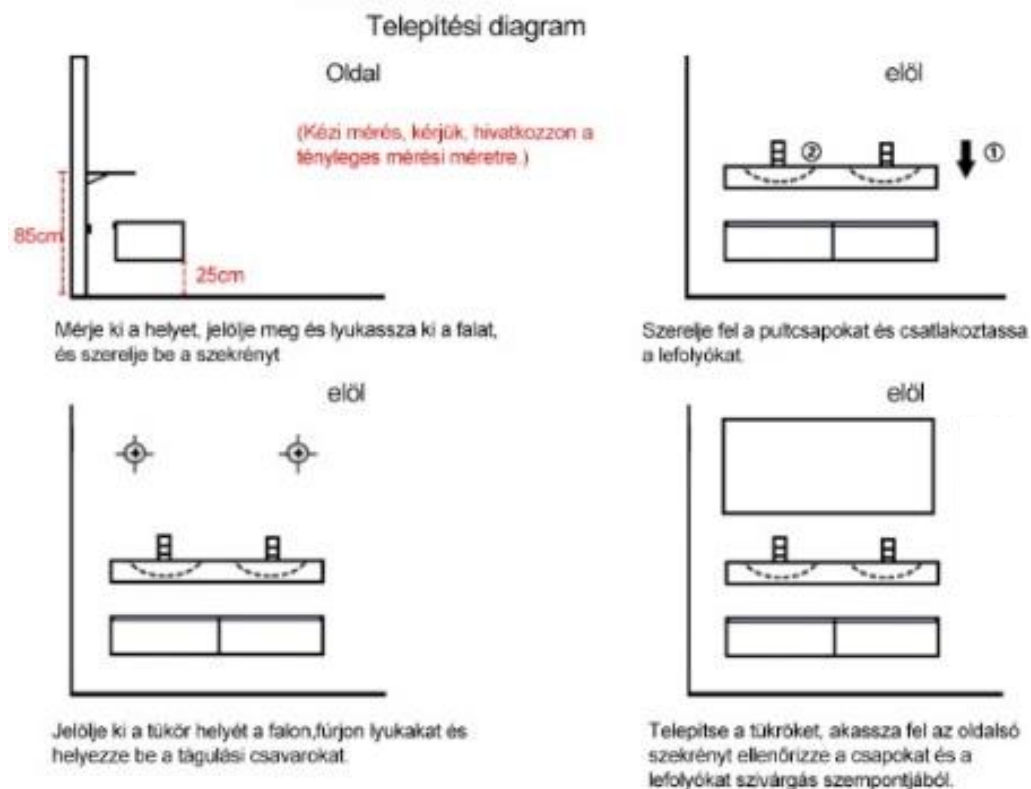

Megjegyzés

1. A telepítés során ellenőrizze, hogy a furatoknál lévő csavarok meg vannak-e húzva. Megakadályozza a szekrények sérülését a későbbiekben.
2. Ellenőrizze, hogy a tükör megfelelően fel van-e akasztva.

Product features

Bathroom cabinets are made of solid wood plywood .The main features are environmental protection, waterproof, strong and durable.

Its style follows the current minimalist philosophy. Simple and generous. Suitable for a variety of decoration styles. It is suitable for various bathroom scenarios such as residences, apartments, hotels, etc.

Product parameters

Vanity material: Solid wood plywood


Hardware: 304 stainless steel hinge, does not rust, durable and quiet

Paint free, eco-friendly material, waterproof

Sink: solid durable, easy to clean

Installation steps

1. Mark the appropriate hanging position of the cabinet on the wall.
2. Use a tape measure to measure the hole spacing behind the cabinet and the countertop. Mark the location on the wall and use an electric drill to make a hole at the marked location. Insert the expansion screw
3. Place the cabinet and the countertop on. And install hardware such as faucet downspouts.
4. The installation method of bathroom mirror is the same as that of cabinet: measure the hole space behind the mirror cabinet. Use an electric drill to make holes at the marked locations on the wall. Insert the expansion screw into the hole and hang the mirror up.

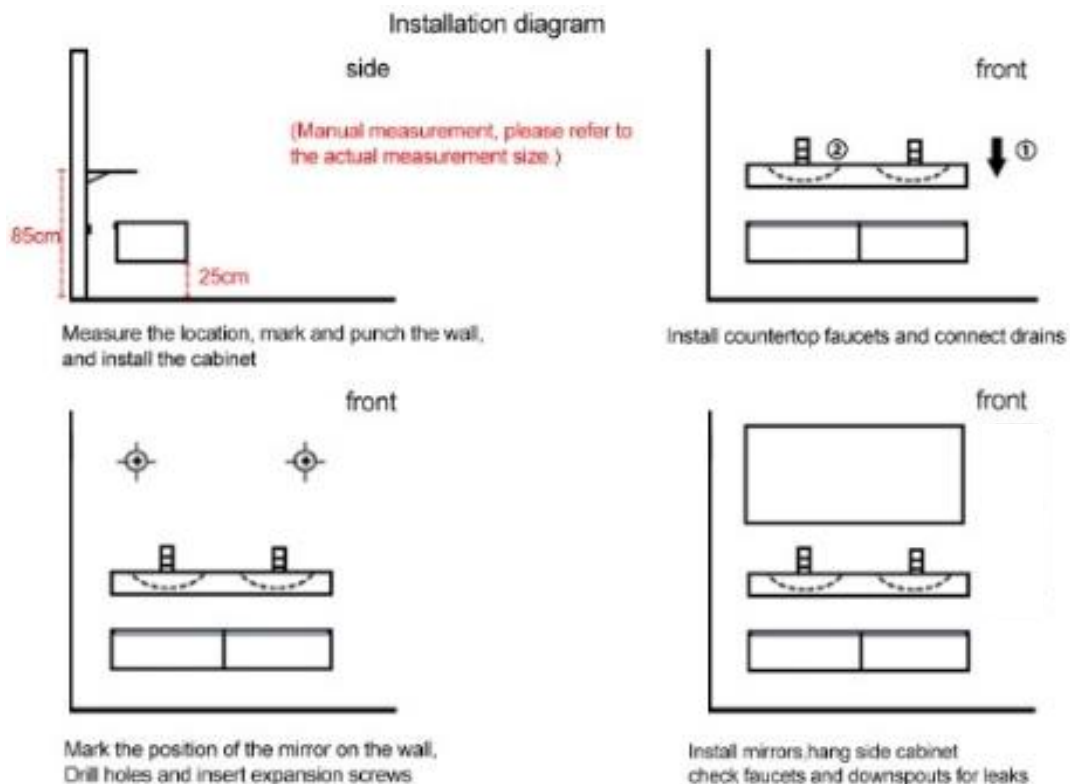

Notes

1. During the installation process check whether the screws at the holes are tightened that prevent cabinets from falling.
2. Check whether mirror is hung up appropriately.

